

# FD2005M1-EI

## 5MP Fixed Dome Camera

### Quick Start Guide



Find additional manuals, the datasheet, the EU Declaration of Conformity, and the latest firmware for this product at:  
[Siqura.com/downloads/software](https://Siqura.com/downloads/software)



SIQURA

### Unpack



Camera Unit



Mounting Plate



Duster



CAT-6 RJ45 conduit



 
Screws(4x) & Plastic Screw Anchors (4x)



Pin Pusher



Security Torx



Quick Start Guide

**Note 1:** Subject to modification. Actual product and accessories may differ in appearance.




**CAUTION:**  
INSTALLATION SHALL BE PERFORMED BY QUALIFIED PERSONNEL ONLY. INSTALLATION SHALL BE IN ACCORDANCE WITH LOCAL PROCEDURES. INSTALLATION WITH POE SHALL BE IN UNEXPOSED NETWORKS. BATTERY REPLACEMENT SHALL NOT BE APPLIED IN VIEW OF THE RISK OF EXPLOSION.  
IF YOU USE AN EXTERNAL POWER SUPPLY, CONTACT SIQURA TO MAKE SURE THAT THE POWER SUPPLY HAS THE PROPER POWER SPECIFICATIONS. MAKE SURE THAT THE POWER SUPPLY COMPLIES WITH LPS REQUIREMENTS. WHEN INSTALLING THE CAMERA, HOOK UP THE CAMERA WITH THE ANTI-DROP CHAIN OF THE PENDANT TO THE ANTI-DROP RING (SEE FIGURE 1). FOR MORE INFORMATION, CONTACT SIQURA.




**NOTE:**  
IT IS NOT RECOMMENDED TO CONTINUOUSLY (24/7) RECORD WITH THE MICRO SD CARD, AS THE CAMERA MAY NOT SUPPORT LONG-TERM CONTINUOUS DATA READ/WRITE. CONTACT THE MANUFACTURER OF THE MICRO SD CARD FOR INFORMATION REGARDING THE RELIABILITY AND THE LIFE EXPECTANCY.

### Connectors

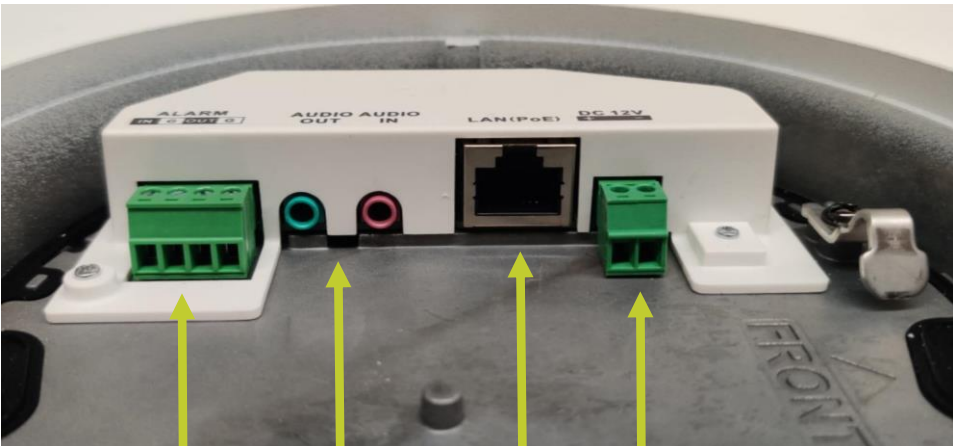

Alarm I/O    Audio I/O    RJ-45    12 Vdc  
802.3af PoE

### Reset & Micro SD

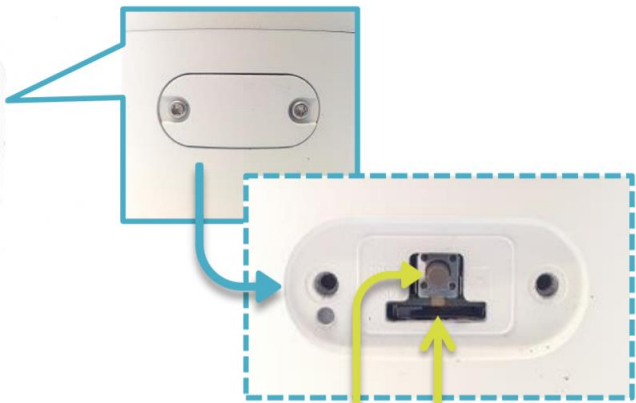

Reset button

Figure 2 Reset button & Micro SD

Micro SD/SDHC/SDXC  
(up to 128 GB)

**Note 2:** Press and hold the reset button for 10 seconds to power on or reboot. It will restore the factory default setting including IP address, user name and password.

### Adjust to Good View




Pan


Rotation

Tilt

### Accessing the camera - DHCP Server

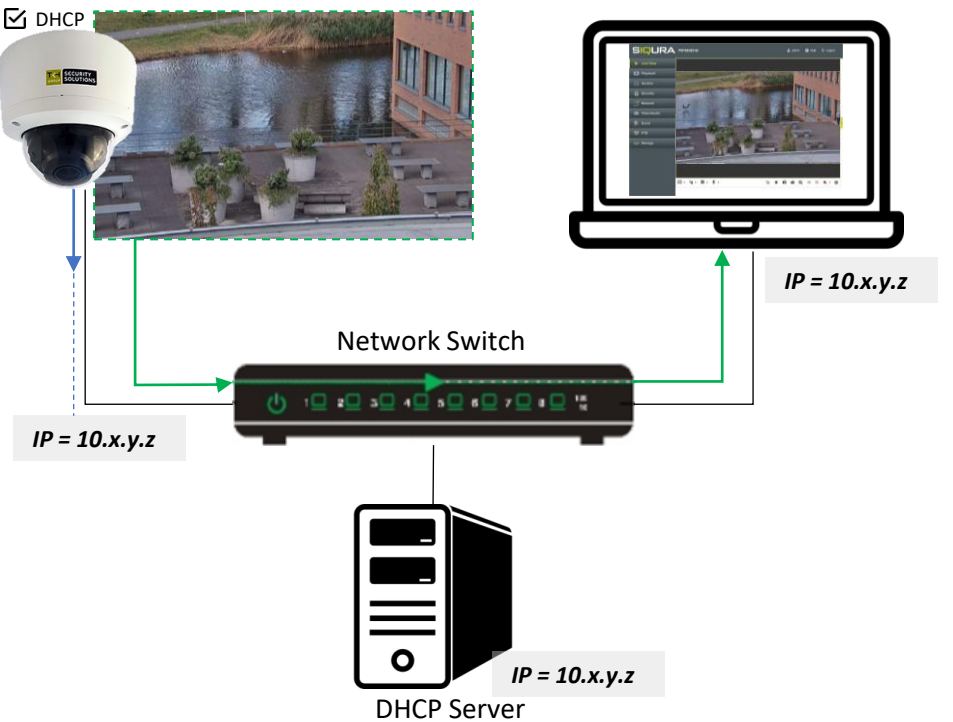

Accessing the camera – Fixed IP address

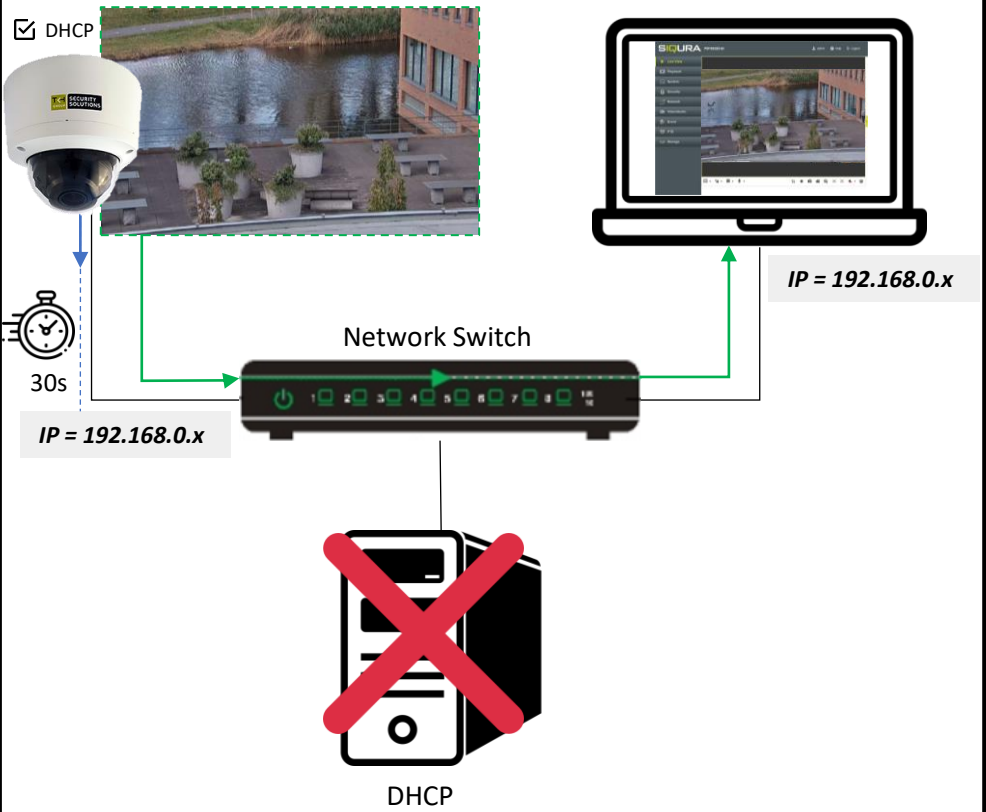

Auto detect with SDM2



1<sup>st</sup> time camera login

Set a strong password

The screenshot shows the 'Activation' page of the Siqura login interface. It includes fields for 'User Name' (admin) and 'Password'. A red 'X' is shown next to the password field, indicating an invalid password. Below the fields, a green box shows a valid password: 'x6W@oM0a!9#F' with a green checkmark. A red box shows an invalid password: 'qwer1234' with a red 'X'.

Browser-based Viewer

