

IFD822V2IR

2 MP IP indoor dome / Caméra dôme intérieur IP 2MP

Quick Start Guide / Guide Rapide





Find additional manuals, the datasheet, the EU Declaration of Conformity and the latest firmware for this product at:
<http://www.tkhsecurity.com/support-files>

Plus d'information sur le site ci-dessus.



Unpack / Déballer

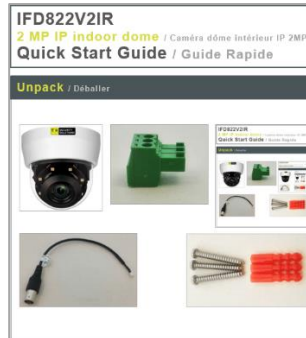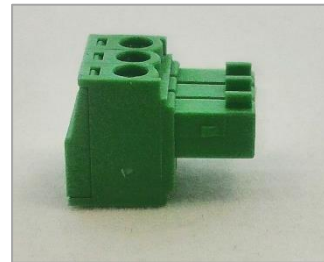

Connect / Connecter

Audio in	DC 12V	AC 24V 1
Ground	Reserved	Ground
Audio out R	DC 12V Ground	AC 24V 2
Audio out L		
Alarm out +		
Alarm out -		
Alarm in +		
Alarm in -		


RJ-45 802.3af PoE

Audio In/Out Alarm In/Out


12/24 Vdc 24 Vac

Video BNC

Point camera / Pointer la caméra

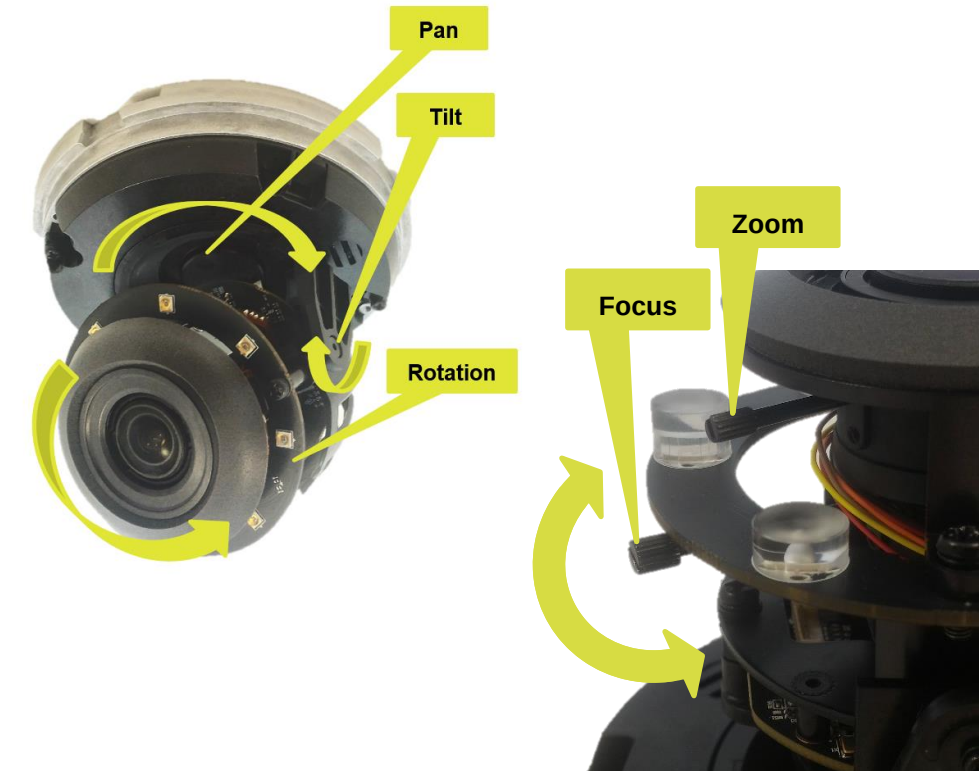

Reset button & micro SD / Bouton reset & micro SD

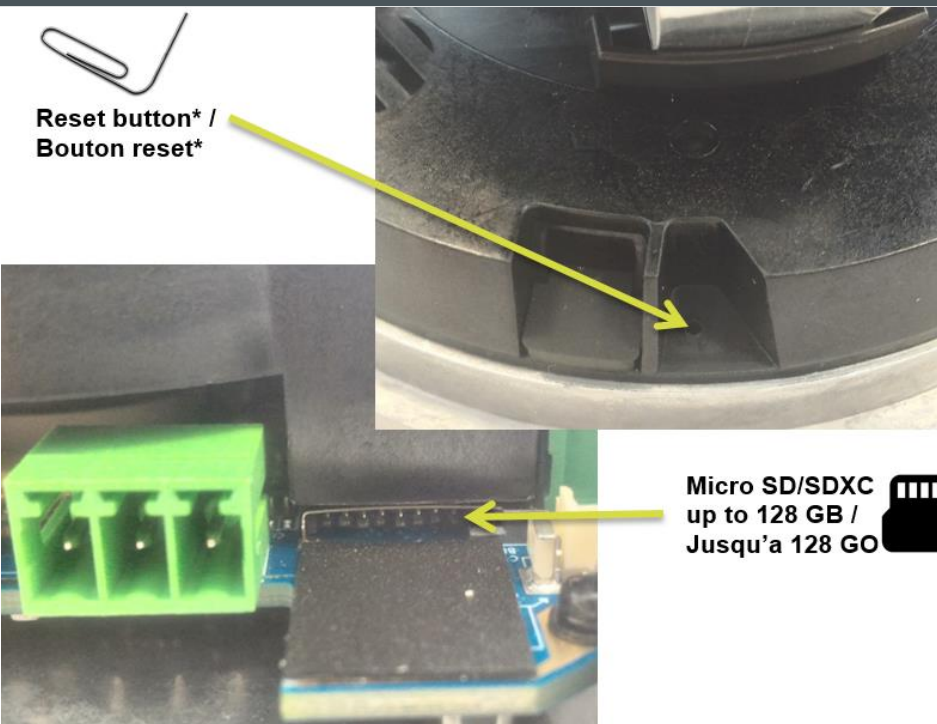

***Reset button:** Press and hold for 10 sec. when powering on or rebooting.
Warning: Restores factory default settings, including IP address, user name and password!
***Bouton reset:** Appuyer et maintenir 10 sec lors de l'allumage ou du reboot.
Attention: La remise à zéro usine supprime l'adresse IP et les mots de passe!


Fixed IP address / Une adresse fixe




Install Device Manager / Installer Device Manager



Change IP address / Changer l'adresse IP

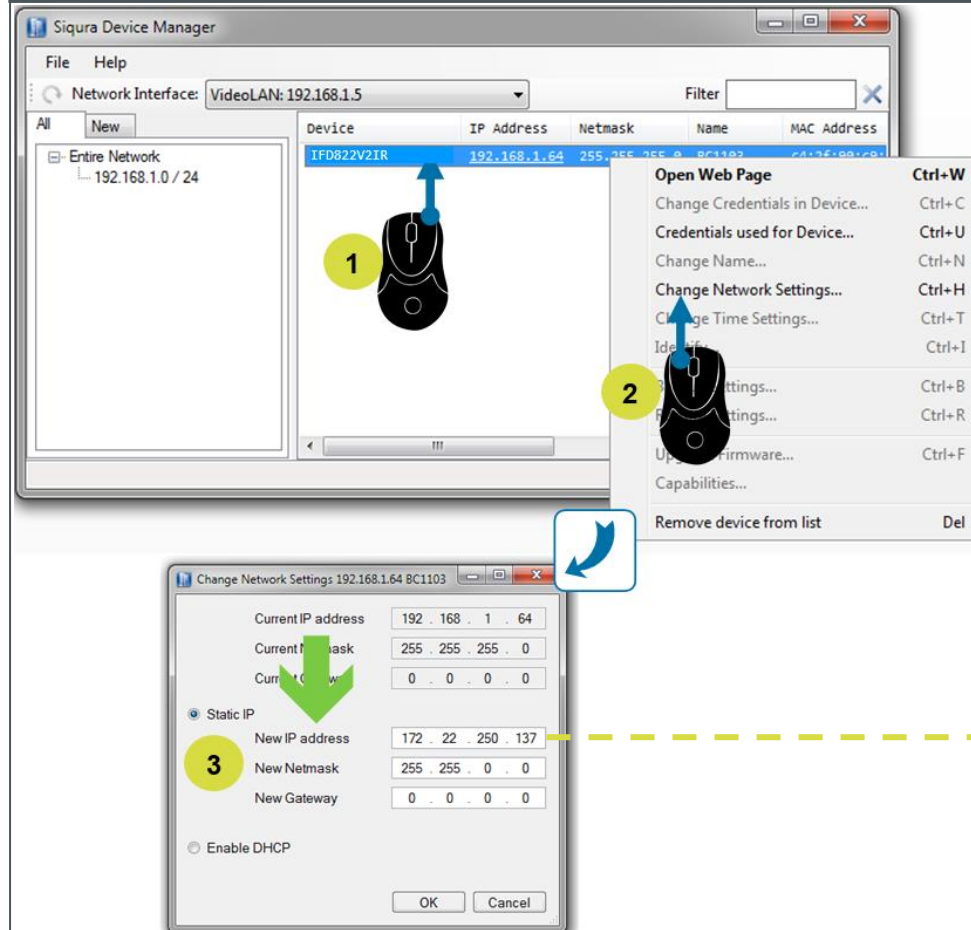

Open web interface / Ouvrir l'interface web

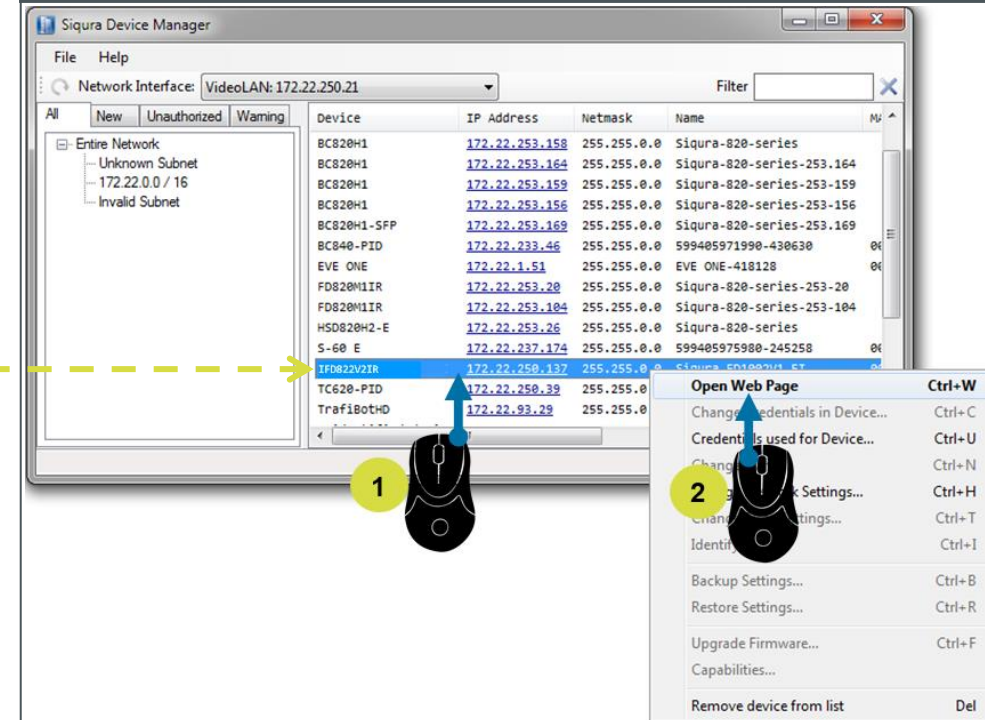

Set password / Créer le mot de passe



The default user name and password are:
Admin
1234


For more information about user accounts and passwords, see User Manual.
Pour plus d'informations sur les comptes et mots de passe, voir le manuel d'utilisation.

Set a strong password now!
Créer un mot de passe fort maintenant!

qwerty1234 ✗

x6W@oM0a!9#F ✓

View live video / Voir la vidéo en direct

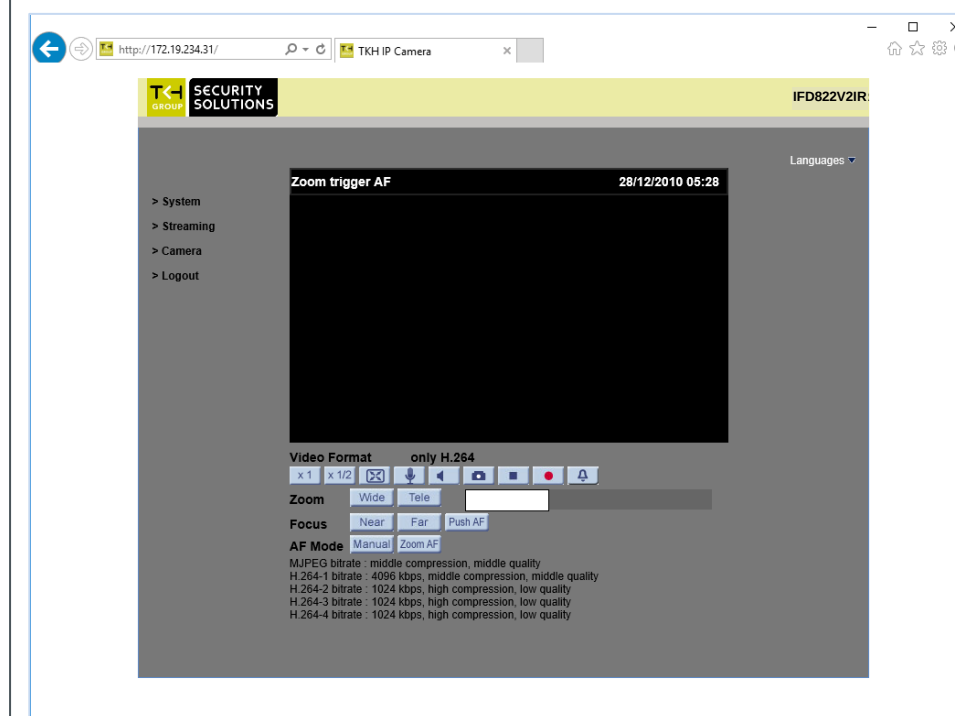

Adjust video / Régler les paramètres vidéo

