

# UP33

Upright PTZ, 33x zoom, 24 Vac

## Quick Start Guide



Find additional manuals, the datasheet, the EU Declaration of Conformity, and the latest firmware for this product at:

[TKHSecurity.com](https://www.tkhsecurity.com)



TKH  
SECURITY


### Unpack



UP33



Quick Start Guide

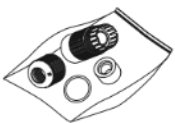

RJ45 waterproof accessory



L-wrench



**Note 1:** Subject to modification. Actual product and accessories may differ in appearance.

### Installation Notices




**CAUTION:**  
INSTALLATION SHALL BE PERFORMED BY QUALIFIED PERSONNEL ONLY. INSTALLATION SHALL BE IN ACCORDANCE WITH LOCAL PROCEDURES. THE CAMERA CONTAINS BATTERIES. DO NOT REPLACE THEM IN RISK OF EXPLOSION.  
DISPOSE BATTERIES IN ACCORDANCE WITH LOCAL REGULATIONS. IF YOU USE AN EXTERNAL POWER SUPPLY, CONTACT SIQURA TO MAKE SURE THAT THE POWER SUPPLY HAS THE PROPER POWER SPECIFICATIONS. MAKE SURE THAT THE POWER SUPPLY COMPLIES WITH LPS REQUIREMENTS. WHEN INSTALLING THE CAMERA, MAKE SURE TO USE APPROPRIATE ANCHORE BOLTS M10 OR BETTER. THE ANCHOR BOLTS SHOULD HOLD A LOAD OF AT LEAST 100KG.  
FOR MORE INFORMATION, CONTACT SIQURA.

### Mounting the camera

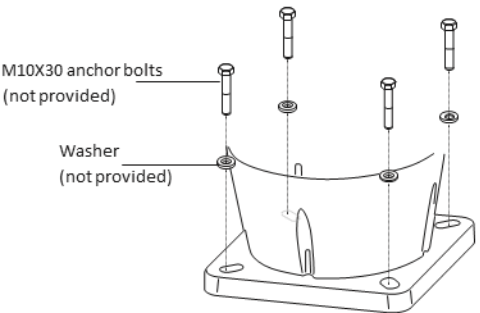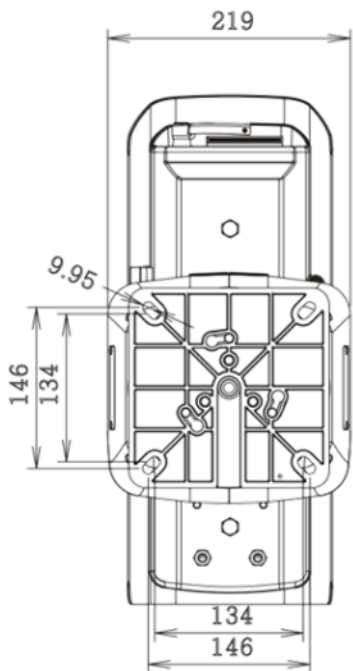


### Wall-mount bracket (Optional)


1. Fix the wall mount with M10 anchor bolts

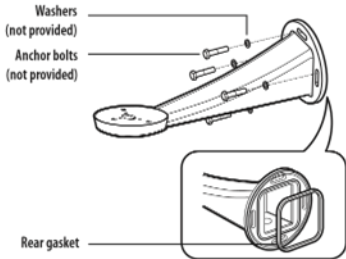


2. Replace the foot with the wall-mount adaptor

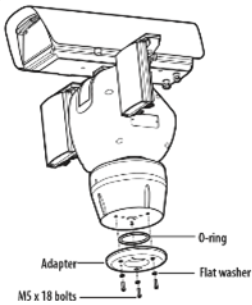


3. Mount the camera on the wall-mount

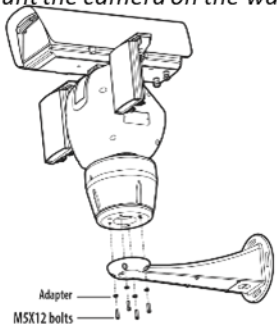

4. Organize the cable & close the cover

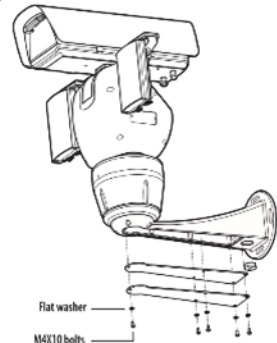

### Camera Cabling

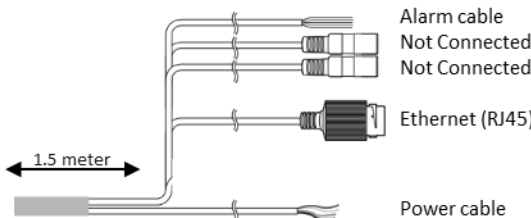


Alarm cable	COLOR
ALARM IN	Not connected
GND	Brown
ALARM OUT NO	Red
ALARM OUT COM	Yellow
ALARM OUT NC	Orange


Power cable	COLOR
Illuminator 24Vac (L)	Black
Illuminator 24Vac (N)	Yellow/Green
Main power 24 Vac (L)	Red
Main power 24 Vac (N)	Yellow

### IP66 wiring and connections


1. Use the RJ45 waterproof accessory to protect the RJ45 connection from water.

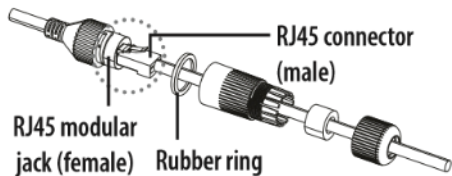

2. Connect the power, I/O, AUDIO, and LAN cables.  
3. Wrap the black cable jacket (Area A) and the cable connection area with waterproof (butyl rubber) tape so that more than half of the butyl rubber tape is overlapped.

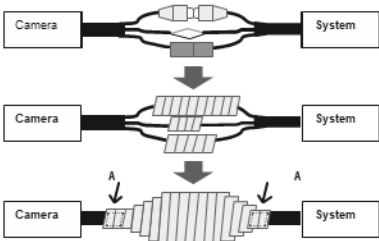


## Accessing the UP33

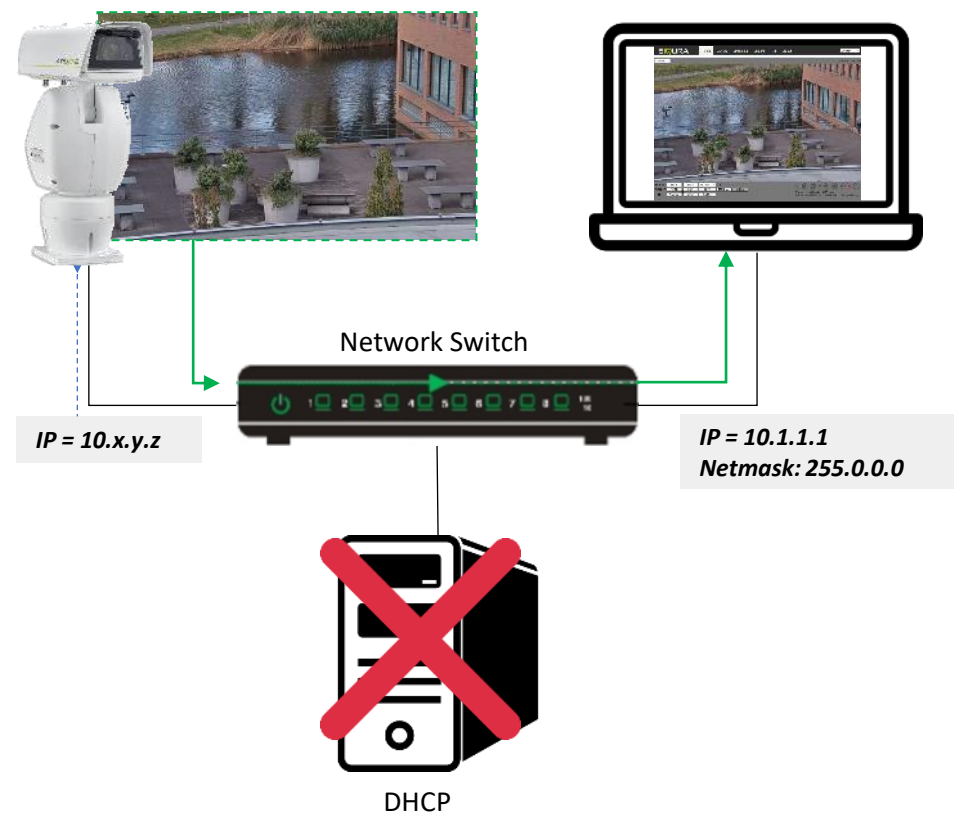


## Auto detect with SDM2




## 1<sup>st</sup> time camera login

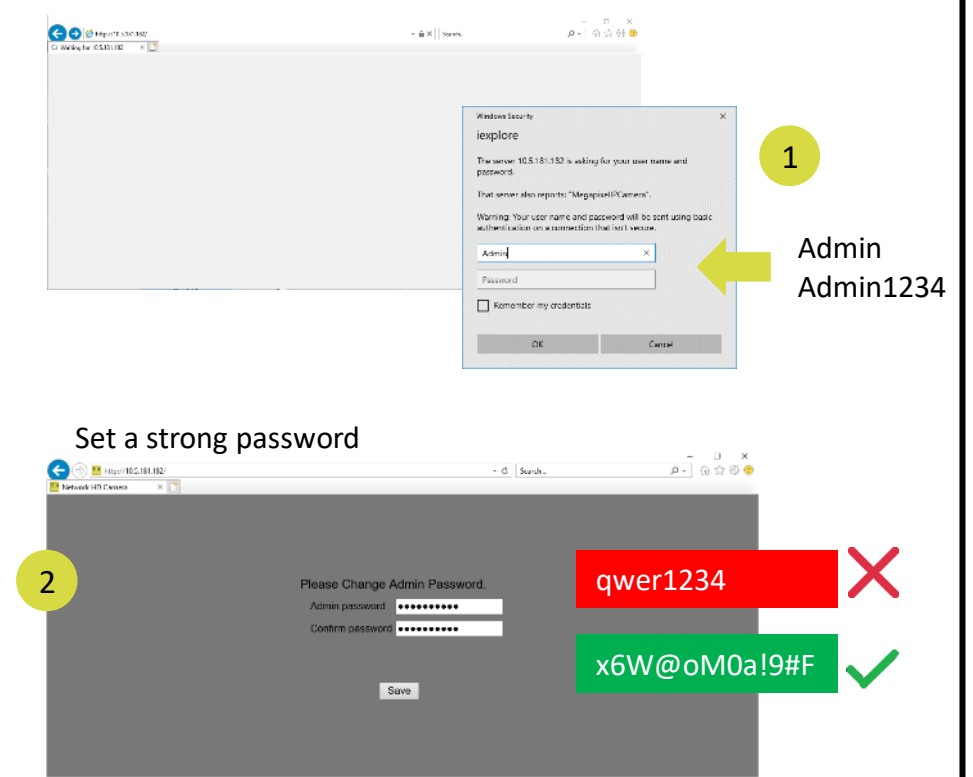

## Install browser-based viewer

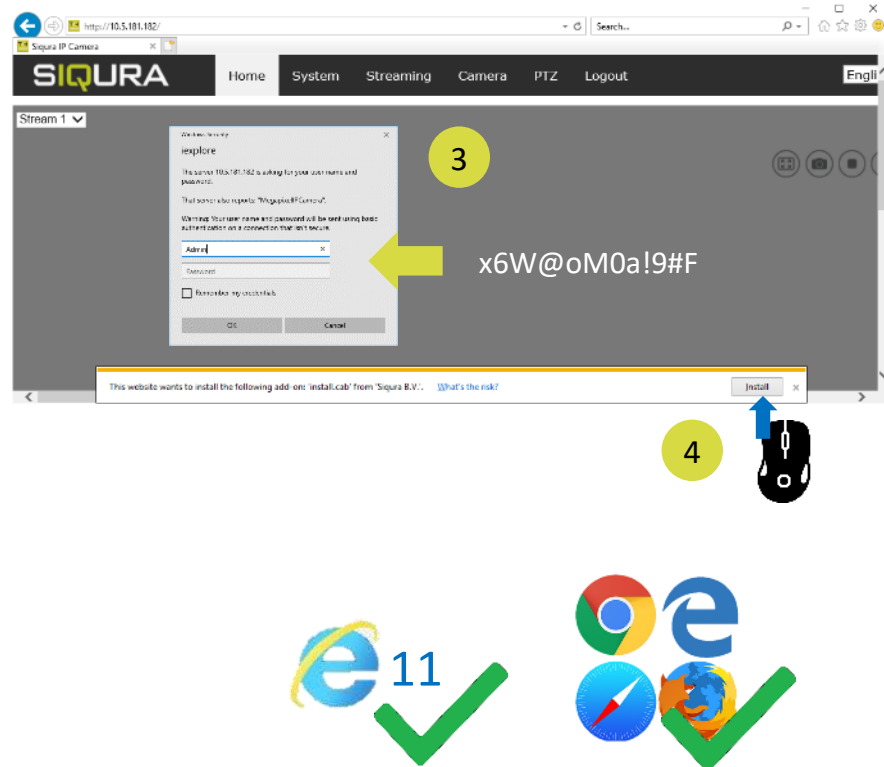

## Install browser-based viewer

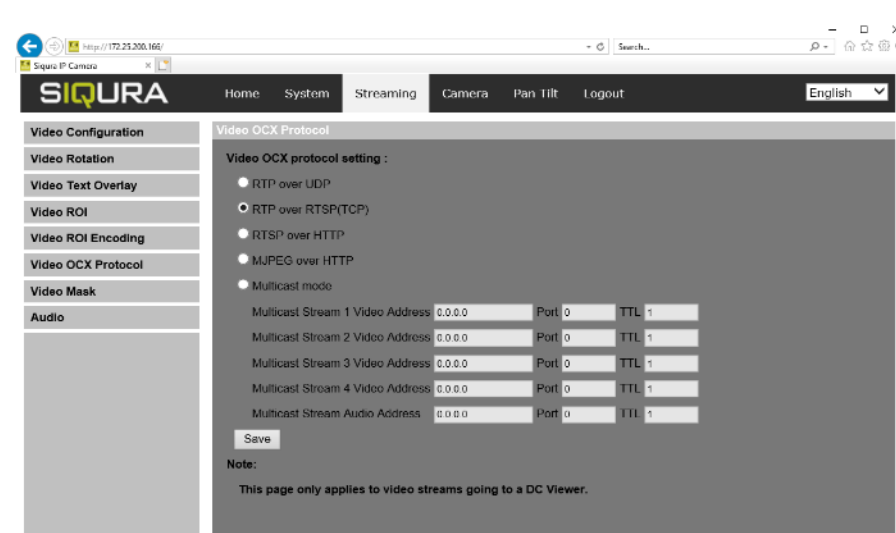

If the web interface is not showing video, you might to open your firewall or set the OCX protocol to RTP-over-RTSP(TCP)

## Browser-based Viewer

Figure 4 shows the main page of the IP camera user interface.

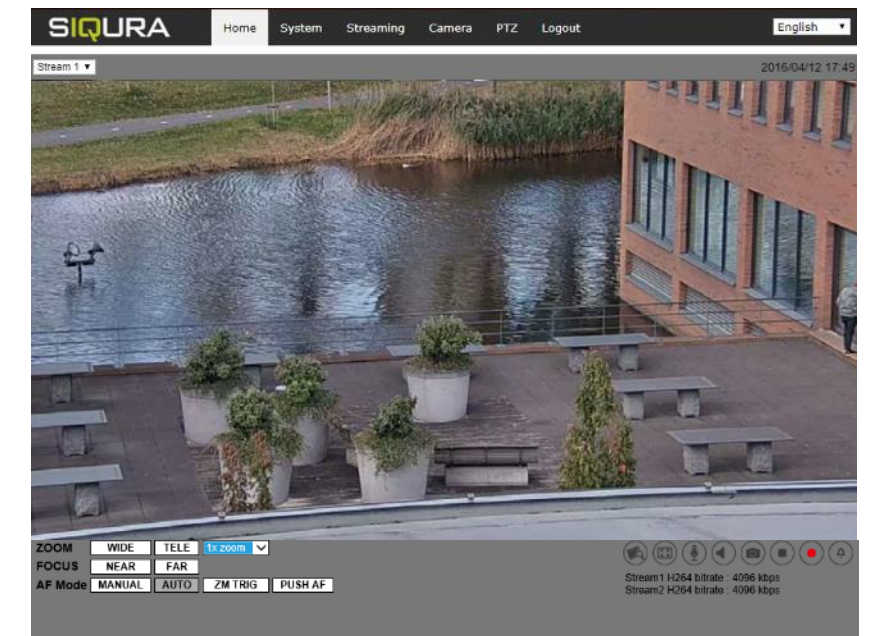


Figure 4 Main page IP camera user interface

**Note 1:** If the IE web interface is not showing video, you might need to open your firewall or set the OCX protocol to RTP-over-RTSP(TCP).